

회로 번호 Circuit No.	위치 Location	수 Quantity	용량 w	비고 Remarks
1~24	조명봉 1 하단 앞열 #1 Light Batten Lower Front Rung	24	120000	
25~48 & RD1~4	조명봉 1 하단 뒷열 #1 Light Batten Lower Back Rung	28	140000	3 DMX(Grid)
49~66 & RD5~8	조명봉 1 상단 #1 Light Batten Upper Rung	22	110000	3 DMX(Grid)
67~90	조명봉 2 앞열 #2 Light Batten Front Rung	24	120000	
91~114 & RD9~12	조명봉 2 뒷열 #2 Light Batten Back Rung	28	140000	3 DMX(Grid)
115~138	조명봉 3 앞열 #3 Light Batten Front Rung	24	120000	
139~162 & RD13~16	조명봉 3 뒷열 #3 Light Batten Back Rung	28	140000	3 DMX(Grid)
163~186	조명봉 4 앞열 #4 Light Batten Front Rung	24	120000	
187~210 & RD17~20	조명봉 4 뒷열 #4 Light Batten Back Rung	28	140000	3 DMX(Grid)
211~226 & RD21~22	앞무대조명 1 #1 Apron Light	18	90000	2 DMX(FOH)
227~242 & RD23~24	앞무대조명 2 #2 Apron Light	18	90000	2 DMX(FOH) Curved
243~262	천장투광실 1 앞열 #FOH 1 Room Front Rung	20	100000	Intercom, DMX in/out
263~280	천장투광실 1 뒷열 #FOH 1 Room Back Rung	18	90000	
281~298	천장투광실 2 #FOH 2 Room	18	90000	Intercom, DMX in/out
299~322 & RD25~26	발코니 #Balcony Rail	26	130000	2 DMX(FOH)
323~330	좌측 측면투광실 #Left Side Box Boom	8	40000	
331~338	우측 측면투광실 #Right Side Box Boom	8	40000	
339~342	우측 조명타워 1 #1 Light Tower-Right Side	4	20000	1:2
343~346	우측 조명타워 2 #2 Light Tower-Right Side	4	20000	1:2
347~350	우측 조명타워 3 #3 Light Tower-Right Side	4	20000	1:2
351~354	좌측 조명타워 1 #1 Light Tower-Left Side	4	20000	1:2

355~358	좌측 조명타워 2 #2 Light Tower-Left Side	4	20000	1:2
359~362	좌측 조명타워 3 #3 Light Tower-Left Side	4	20000	1:2
363~386	하늘막상단조명 #Sky CYC. Light	24	120000	1:4
387~402	뒷무대조명봉 #Rear Stage Light Batten	16	80000	
403~406	음향반사판 #Acoustical Shell	4	20000	
407~409	오케스트라피트 좌측 플로어포켓 #Left Floor Pocket, Orchestra Pit	3	15000	
410~412	-	3	-	Disable 사용안함
413~415	오케스트라피트 우측 플로어포켓 #Right Floor Pocket, Orchestra Pit	3	15000	
416~418	플로어포켓 L2 #L2 Floor Pocket(Left)	3	15000	
419~421	플로어포켓 R2 #R2 Floor Pocket(Right)	3	15000	
422~425	플로어포켓 L1 #L1 Floor Pocket(Left)	4	20000	
426~429	플로어포켓 R1 #R1 Floor Pocket(Right)	4	20000	
430~432	플로어포켓 L4 #L4 Floor Pocket(Left)	3	15000	
433~435	플로어포켓 R4 #R4 Floor Pocket(Right)	3	15000	
436~438	플로어포켓 L5 #L5 Floor Pocket(Left)	3	15000	
439~441	플로어포켓 R5 #R5 Floor Pocket(Right)	3	15000	
442~444	플로어포켓 L6 #L6 Floor Pocket(Left)	3	15000	
445~447	플로어포켓 R6 #R6 Floor Pocket(Right)	3	15000	
448~451	플로어포켓 L7-1 #L7-1 Floor Pocket(Left)	4	20000	
452~455	플로어포켓 L8-1 #L8-1 Floor Pocket(Left)	4	20000	
456~459	업스테이지 센터 플로어포켓 #Floor Pocket(USC)	4	20000	
460~463	플로어포켓 R8-1 #R8-1 Floor Pocket(Right)	4	20000	
464~467	플로어포켓 R7-1 #R7-1 Floor Pocket(Right)	4	20000	
468~470	뒷무대 플로어포켓 L1 #L1 Rear Stage Floor Pocket	3	15000	
471~473	뒷무대 플로어포켓 R1 #R1 Rear Stage Floor Pocket	3	15000	
474~476	뒷무대 플로어포켓 L2 #L2 Rear Stage Floor Pocket	3	15000	

477~479	뒷무대 플로어포켓 R2 #R1 Rear Stage Floor Pocket	3	15000	
481~495	객석등 #House Light	15	48300	Analogue/DMX Enable 전환가능
RD27~28	플로어포켓 L3 #L3 Floor Pocket(Left)	2	10000	1 DMX (Floor)
RD29~30	플로어포켓 R3 #R3 Floor Pocket(Right)	2	10000	1 DMX (Floor)
RD31~32	플로어포켓 L7-2 #L7-2 Floor Pocket(Left)	2	10000	1 DMX (Floor)
RD33~34	플로어포켓 L8-2 #L8-2 Floor Pocket(Left)	2	10000	1 DMX (Floor)
RD35~36	플로어포켓 R8-2 #R8-1 Floor Pocket(Right)	2	10000	1 DMX (Floor)
RD37~38	플로어포켓 R7-2 #R7-2 Floor Pocket(Right)	2	10000	1 DMX (Floor)